



User's Manual

guitar pedal germanium auto wah **SviSound WahoZoid**

OUTPUT Jack

Connect this jack to your amp or to the input of another effect unit.

RATE knob

Control of frequency modulate (vibrato). Active when LEVEL/DEPTH switch in the "level" position.

LEVEL/DEPTH knob

Control the level of modulation or width (variable range) of the wah effect.

LEVEL/DEPTH switch

Choose the function of the LEVEL/DEPTH knob. Add in the "level" mode modulation (vibrato).

9V AC Adaptor Jack

Accepts connection of an AC Adaptor.

! Use only the correct AC adaptor 9 Volts with negative on central contact.

INPUT Jack

Accepts signals coming from a guitar or other musical instrument, or another effect unit.

SENS knob

Sets the filter level, tune this carefully to fit your guitar output and your playing touch.

DECAY knob


Control return time when the filter frequency falls back.

FOOT switch

This switch turns the effect on/on.

LED indicator

Shows whether the effect is on.

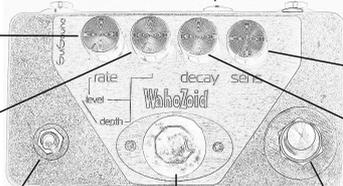

WahoZoid provide a dynamic wah effect that's based on your pick attack. You get total control of the effect from four knobs and one switch. WahoZoid is not only classic auto wah effect but wah-vibrato too. So you can get many different great sounds from one pedal. The WahoZoid circuits based on rare germanium military ex-USSR transistors. It provide classic tones with modern tunes.

Controls functions:

SENS knob - Sets the filter level, tune this carefully to fit your guitar output and your playing touch. You can further change the sensitivity from your guitar volume knob too.

DECAY knob - Controls return time when the filter frequency falls back to start point. This can be set fast so you get the wah effect on every note or slow for a more classic auto wah sound

LEVEL/DEPTH knob - Control the level (LEVEL position) of modulation (vibrato) or width (DEPTH position), variable range of the wah effect.

RATE knob - Control of frequency modulate (vibrato). Active when LEVEL/DEPTH switch in the "level" position.

LEVEL/DEPTH switch - Choose the function of the LEVEL/DEPTH knob. Add in the "level" mode the modulation (vibrato) to wah effect.

When SENS knob on left position auto wah do not changing from guitar signal and you can choose frequency of filter manually from DEPTH (switch to DEPTH) or get vibrato using LEVEL and RATE (switch to LEVEL).

You can get unique effects when you will combine it. For example SENS in working position (wah changing from guitar signal) and switch to LEVEL. When you will change LEVEL control you can get auto wah on start and wah vibrato when signal will decreased.